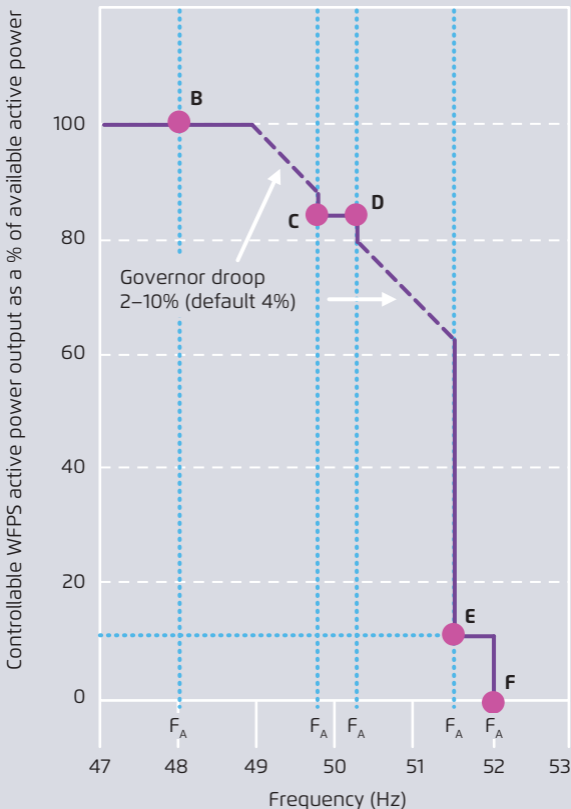# Grid following mode configuration from the Irish frequency response tests

Figure 23

Note: (i) Droop is calculated with respect to registered capacity
(ii) The frequency deveiation is calculated from nominal frequency, not the deadband edge